

# PORSCHE DIESEL

# PORSCHE DIESEL

 Code



 Code




 Code



 Code




F  
F 217 ..... 298  
F 219 ..... 298  
F 319 ..... 298  
F 329 ..... 298  
F 419 ..... 298

 Code




 Code






















 Code

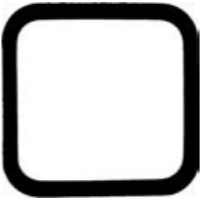

 Code

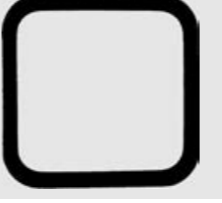

PORSCHE DIESEL							
Standard Star Standard T	2 Zyl.	18-22 kW (24-30 PS)	F 217 F 219	 1	<b>D38540-00</b> <sup>(18)</sup>		
Super Export Super L	3 Zyl.	29 kW (39 PS)	F 319 F 329		<b>D38540-00</b> <sup>(18)</sup>		
Master 419	4 Zyl.	37 kW (50 PS)	F 419	01/60→	<b>D38540-00</b> <sup>(18)</sup>		

					
<b>X83749-01</b> 2x 		<b>X59671-01</b> 2x 	<b>X82585-01</b> 2x 		
<b>X83749-01</b> 3x 		<b>X59671-01</b> 3x 	<b>X82585-01</b> 3x 		
<b>X83749-01</b> 4x 		<b>X59671-01</b> 4x 	<b>X82585-01</b> 4x 		

<sup>(18)</sup> para una culata de cilindro / für einen Zylinderkopf / for one cylinder head / pour une culasse / per una testata / для головки блока цилиндров

